

**AERO PENDANT****ARO-25P (25")****CAUTION**

TURN OFF THE MAIN POWER AT THE CIRCUIT BREAKER BEFORE INSTALLING THE FIXTURE IN ORDER TO PREVENT POSSIBLE SHOCK

IF YOU ARE UNFAMILIAR WITH PROPER ELECTRICAL WIRING CONNECTIONS OBTAIN THE SERVICES OF A QUALIFIED ELECTRICIAN

**GENERAL**

- Read all instructions carefully for safe operation and installation.
- All electrical connections must be in accordance with local and national electrical code (N.E.C) standards.
- Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instruction. Please contact Blackjack Lighting if any parts are missing or damaged.
- This product is suitable for damp locations.

**INSTALLATION****PREPARATION**

1. Remove the fixture and glass lens from the box.
2. Remove the canopy cover(11) from the u-bracket(12) by loosening the decorative nut(13).
3. Remove the ceiling plate(10) from the u-bracket(12) by loosening the two screws(16).

**MOUNTING**

4. Pull the supply wires(2&4) and the house ground wire(6) out of the outlet box(1) and thread them through the large center hole in the ceiling plate(10). Attach the ceiling plate(10) to the outlet box(1) by using the two mounting screws(9).

**ELECTRICAL CONNECTIONS**

5. Using the wire connectors(8), connect the white supply wire(2) to the white fixture wire(3); connect the black supply wire(4) to the black fixture wire(5); and connect the house ground wire(6) to the fixture ground wire(7). Tuck the wires back into the outlet box(1).

**FINAL ASSEMBLY**

6. Line the holes of the u-bracket(12) up with the holes in the ceiling plate(10) and secure them together with the two screws(16).
7. Adjust the three suspension cables to the appropriate length by either pushing the individual cable up into the adjustable gripper(18) or by pushing the small barrel upward (located on the bottom of the adjustable gripper(18)). This will release the cable tension and allow the suspended cable to increase in length.
8. Align the hole in the canopy cover(11) over the threaded nipple(17) on the bracket(12) and secure it with the decorative nut(13).
9. Push the glass lens(15) up through the thread nipple(17) and secure it to the fixture body(14) with the decorative nut(13).
10. Once the canopy is in place, use the adjustable grippers(18) to fine tune the fixture suspension cable lengths so that the fixture is level and the three wires are even in length.

## DIMMING

- Fixture Dimming Type: TRIAC, ELV or 0-10V dimmable
- For recommended dimmers see <https://www.blackjacklighting.com/dimming-information>

## HARDWARE



**Wire Connectors (#8)**  
[ 3 Included ]




**Mounting Screws (#9)**  
[ 2 Included ]



**Decorative Nut (#13)**  
[ 2 Included ]



**Screws (#16)**  
[ 2 Included ]

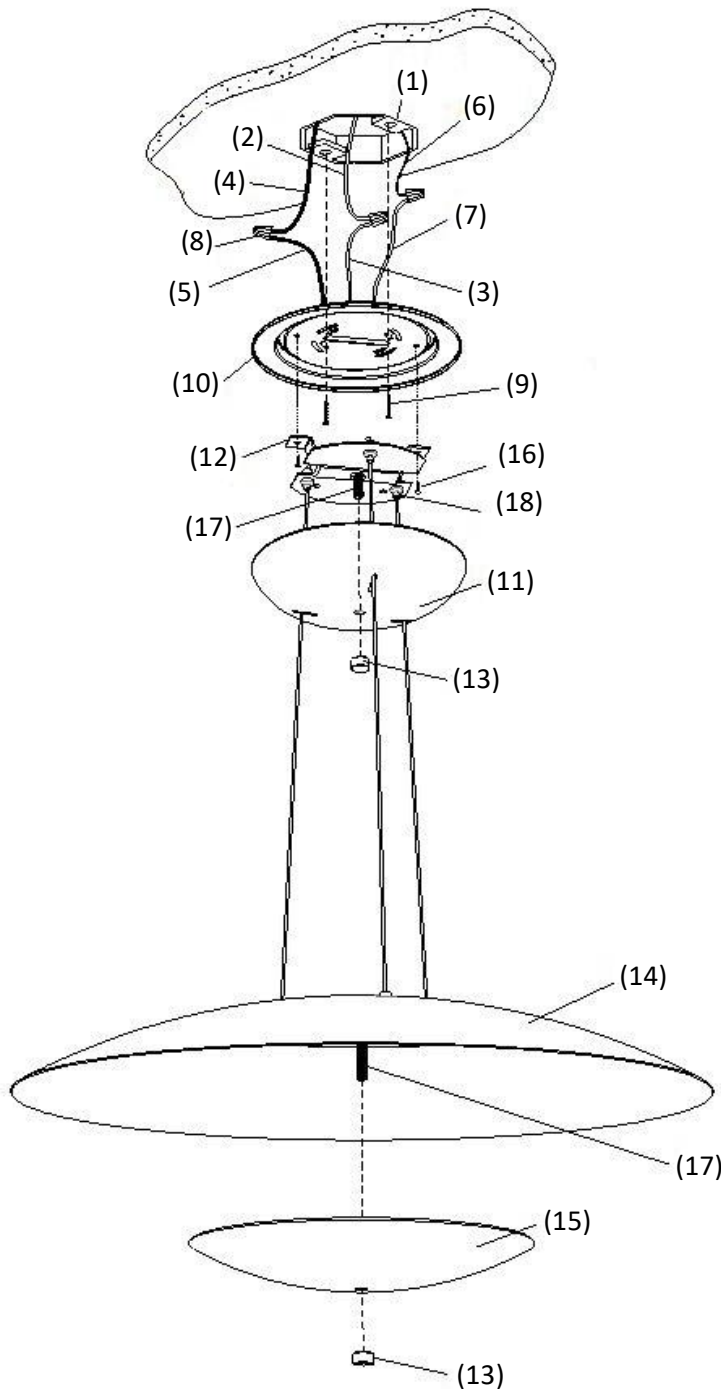

1. OUTLET BOX (by others)
2. WHITE SUPPLY WIRE
3. WHITE FIXTURE WIRE
4. BLACK SUPPLY WIRE
5. BLACK FIXTURE WIRE
6. HOUSE GROUND WIRE
7. FIXTURE GROUND WIRE
8. WIRE CONNECTORS
9. MOUNTING SCREWS
10. CEILING PLATE
11. CANOPY COVER
12. U-BRACKET
13. DECORATIVE NUT
14. FIXTURE BODY
15. GLASS LENS
16. SCREWS
17. THREADED NIPPLE
18. GRIPPER