

# READ AND FOLLOW ALL SAFETY INSTRUCTIONS – SAVE THESE INSTRUCTIONS

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

# IMPORTANT SAFEGUARDS – READ AND FOLLOW SAFETY INSTRUCTIONS

1. Do not use outdoor except when marked for wet locations.
2. Suitable for damp locations.
3. Do not mount near gas or electric heaters.
4. Equipment should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel.
5. The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
6. Do not use this equipment for other than intended use.
7. The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
8. This product is intended for use with lighting fixtures controlled by a generator or emergency panel.

### MAXIMUM MOUNTING HEIGHT.

Maximum mounting height is measured from the lowest portion of the luminaire. Minimum lumen output is 400 lm/ft, unless otherwise noted.

	LUMINAIRE MODEL SERIES	MAXIMUM MOUNTING HEIGHT
CEILING MOUNTED	39, 39W	26.2 ft (8.0 m)
	80, 80R	
	AVX	
	AXA	
	GA	
WALL MOUNTED	39, 39W	16.4 ft (5.0 m)
	AVX	
	GA	
RECESSED	HETW <sup>(1)</sup>	30.4 ft (9.3 m)
	LL6 <sup>(1)</sup>	32.2 ft (9.8 m)
	LRX2G, LRX2F	21.5 ft (6.6 m)
	LRX3G, LRX3F	
	LRX4G, LRX4F	
	LRX5G, LRX5F	
	MX2R	20.5 ft (6.2 m)
	MX4R <sup>(1)</sup>	29.4 ft (9.0 m)
	PXG or PXF	18.3 ft (5.6 m)

<sup>1</sup> Minimum lumen output is 800 lm/ft.

	LUMINAIRE MODEL SERIES	MAXIMUM MOUNTING HEIGHT
CEILING OR WALL MOUNTED	75	15.4 ft (4.7 m)
	75L	
	75R	
	75S	
	75W	
	76	26.2 ft (8.0 m)
	76R	
	LLM	15.4 ft (4.7 m)
	MX2D	20.5 ft (6.2 m)
	MX2S	
	MX2UD	
	MX2W	
	MX2WUD	
	MX4D	
	MX4S	29.4 ft (9.0 m)
	MX4UD/MX4UDC	
	MX4WD	
	MX4WUD/MX4WUDC	
	SDI5	15.4 ft (4.7 m)

# SAVE THESE INSTRUCTIONS

1. Servicing should be performed by qualified personnel only.
2. Disconnect all sources of power before servicing.
3. This unit has more than one power supply connection point. To reduce the risk of electrical shock, disconnect both the normal and the emergency power supplies before servicing.

### MAINTENANCE

No routine maintenance is required to keep the GTD functional. However, it should be checked periodically to ensure that it is working properly.

# EMERGENCY LIGHTING AND POWER EQUIPMENT

## INSTALLATION INSTRUCTIONS

### WIRING DIAGRAM

Attach power supply and ground wires using UL listed wire connectors.

