

Seem® 2 LED

Direct/Indirect Suspended | FSM2BS



FOCAL POINT®

BEFORE YOU BEGIN


- Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).
- To prevent electrical shock, disconnect electrical supply before installation or servicing.
- Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight.
- Focal Point, LLC accepts no responsibility for inadequately reinforced walls and/or ceilings.
- The information contained in this drawing is the sole property of Focal Point, LLC. Any reproduction in part or whole without the written permission of Focal Point, LLC is prohibited.

INSTRUCTION KEY


- ATTENTION**
- SEE ADDITIONAL INSTRUCTIONS**
- POWER OFF**
- POWER ON**

COMPONENT KEY

FOCAL POINT

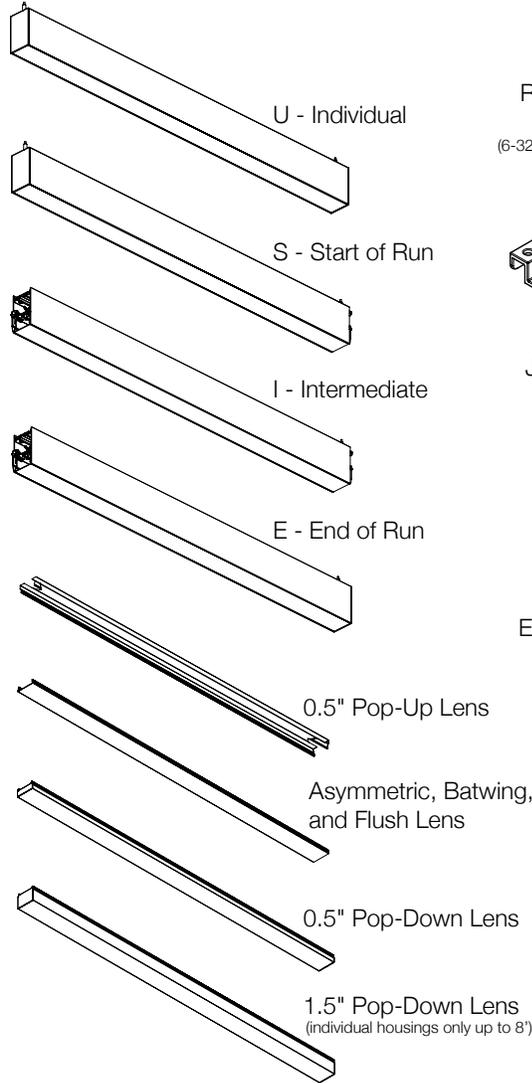

SHIPPED INSTALLED

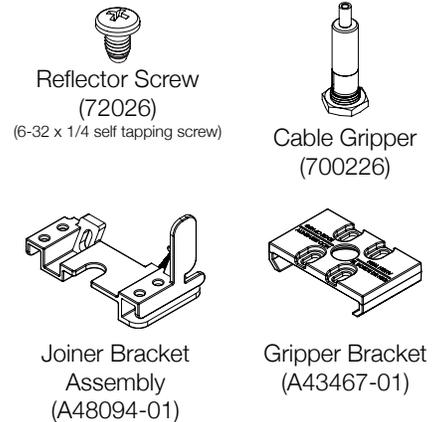


SHIPPED IN HARDWARE BAG




ASYMMETRIC DISTRIBUTIONS

INDIRECT ASYMMETRIC Standard Application Example

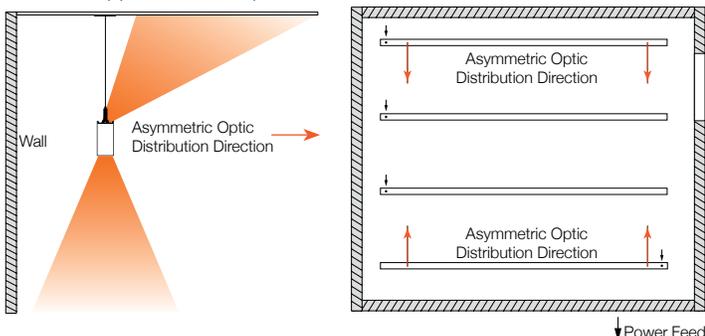

DIRECT/INDIRECT ASYMMETRIC Standard Application Example

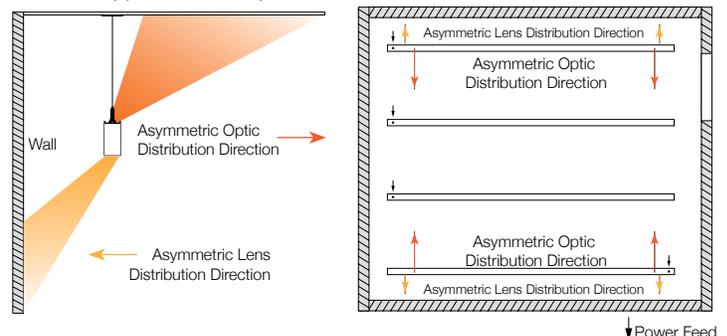

⚠️ INDIVIDUAL UNIT INSTALLATION FOLLOW STEPS 1, 2, 3, 10, 11 & 12

1

I

FOLLOW FOCAL POINT INSTRUCTIONS FOR UNIVERSAL SUSPENSION SYSTEM ASSEMBLY. SEE IS0166

2

⚠️ Avoid all contact with LED surface, LEDs are easily damaged!

3

4

⚠️ Avoid all contact with LED surface, LEDs are easily damaged!

5

6

MAKE ELECTRICAL CONNECTIONS

7




8

POP-UP LENS ONLY

9 X2




10

11

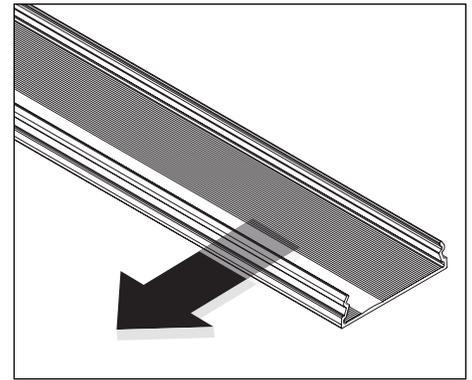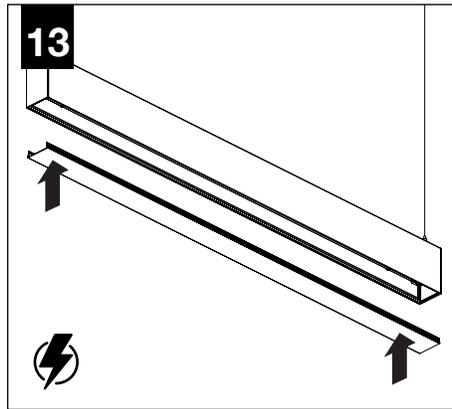
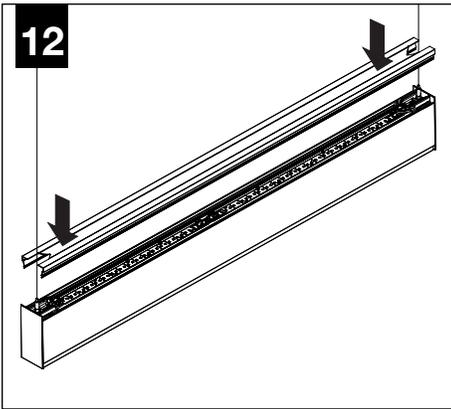


Asymmetric Lens Distribution Direction


PATTERNS

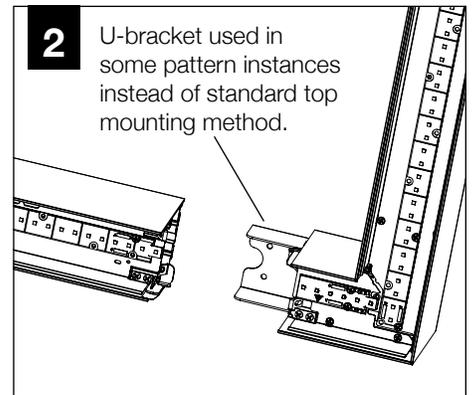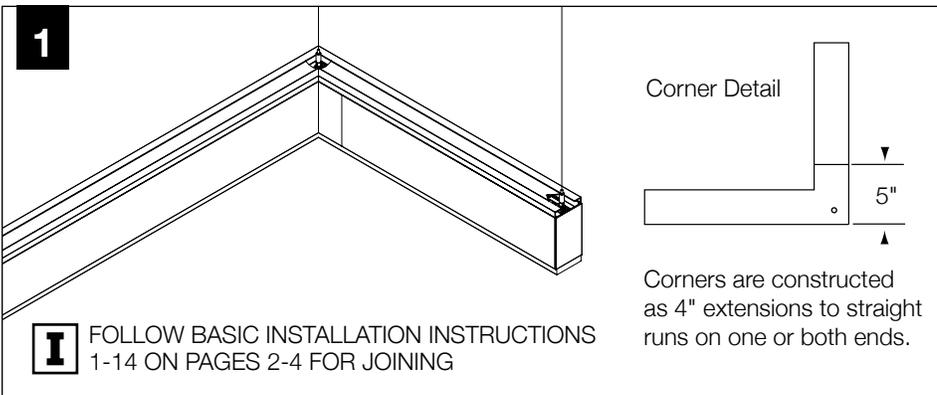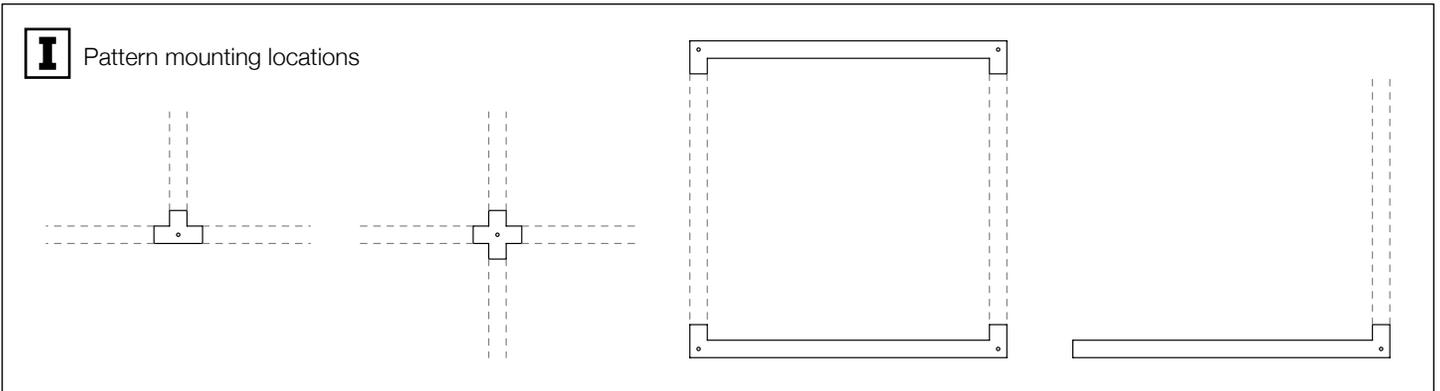


DRIVER SERVICE

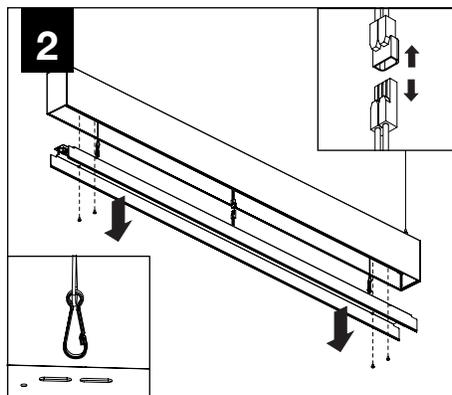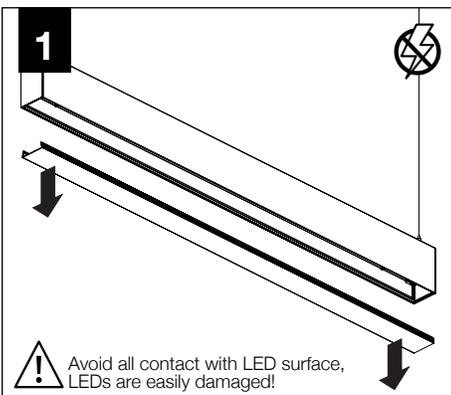

ACUTY nLIGHT

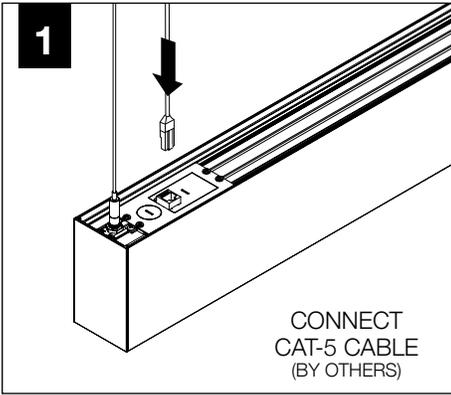

WATTSTOPPER

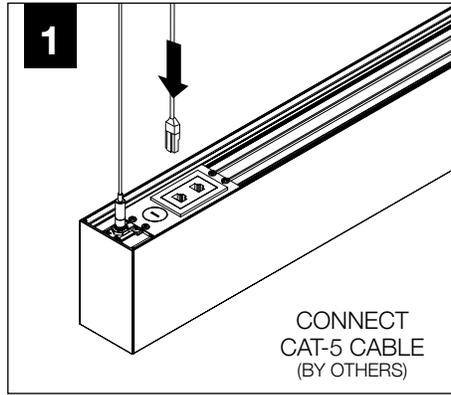

HUBBELL NX

