

# universal suspension



## KEY



POWER OFF



POWER ON




ATTENTION



- A. SUSPENSION SYSTEM IS NOT RECOMMENDED FOR OUTDOOR USE. IT SHOULD NOT BE EXPOSED TO WATER, WIND OR CONTINUOUS OSCILLATION. AVOID PLACING LUMINAIRES CLOSE TO HVAC VENTS OR IN CHEMICAL-LADEN ENVIRONMENTS SUCH AS INDOOR SWIMMING POOLS.
- B. SUSPENSION SYSTEM IS SUITABLE FOR DAMP LOCATIONS.
- C. STOP-SLEEVE ON AIRCRAFT CABLE MUST ALWAYS BE IN A FREE STATE. LOCKING OR CLAMPING OF THE STOP-SLEEVE WILL VOID FOCAL POINT WARRANTY CLAIMS.
- D. ALL SUSPENSION LOCATIONS MUST BE TIED OFF TO STRUCTURE ABOVE.
- E. CANOPY ASSEMBLY DESIGNED FOR UP TO 18/6 CABLE. CABLE 18/3 OR SMALLER MUST BE TIED IN KNOT, WHERE NOTED IN THE FOLLOWING INSTRUCTIONS, FOR STRAIN RELIEF.


FOCAL POINT (PARTS SUPPLIED WILL VARY BASED ON SUSPENSION KIT)

## 14470 - 5.25" CANOPY BRACKET ASSEMBLY

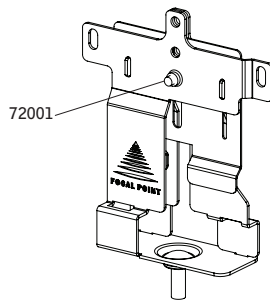


MAXIMUM SUSPENDED WEIGHT: 45LBS

## 14469 - 2" CANOPY BRACKET ASSEMBLY

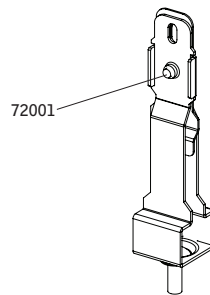


MAXIMUM SUSPENDED WEIGHT: 50LBS

## 10564 - JUNCTION BOX ASSEMBLY

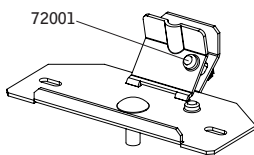

FOR USE WITH 5" CANOPIES (17019 & 17568)  
& OCTAGONAL JUNCTION BOX (BY OTHERS)  
MAXIMUM SUSPENDED WEIGHT: 25LBS

## 16102 - SPLICE BOX ASSEMBLY

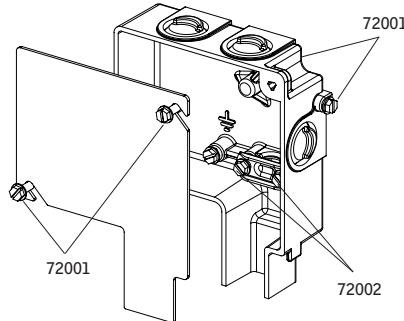

## SUSPENSION KITS

(XX = SUSPENSION LENGTH)

- CXX-UNV-18/4FD - REGULAR FEED 5" CANOPIES
- CXX-UNV-N0FD - REGULAR NON-FEED 5.25" CANOPIES
- CPXX-UNV-18/4FD - CHICAGO PLENUM FEED 5" CANOPIES
- CSXX-UNV-18/4FD - SLOPED CEILING FEED 5.25" CANOPIES
- CSXX-UNV-N0FD - SLOPED CEILING NON-FEED 5.25" CANOPIES
- JXX-UNV-N0FD - REGULAR NON-FEED 2" CANOPIES


## REPLACEMENT PARTS LIST

- 10564 - JUNCTION BOX ASSEMBLY
- 14469 - 2" CANOPY BRACKET ASSEMBLY
- 14470 - 5.25" CANOPY BRACKET ASSEMBLY
- 16102 - SPLICE BOX ASSEMBLY
- 17017 - 2" CANOPY NON-FEED
- 17019 - 5.25" CANOPY NON-FEED
- 17568 - 5.25" CANOPY WITH FEED
- 18548 - GASKET (CHICAGO PLENUM ONLY)
- 72001 - 3/8" HEX SCREW
- 72002 - 1/2" HEX SCREW
- 73060-XX - AIRCRAFT CABLE WITH STOP SLEEVE

- 73650 - CABLE COUPLER
- 73750 - CABLE COUPLER SLOPED CEILING

- BY OTHERS
- OFF TEE INSTALLATIONS - BAR HANGER
- SLOPED CEILING NON-FEED - WOOD SCREW
- JUNCTION BOX ASSEMBLY - OCTAGONAL JUNCTION BOX

## CANOPIES

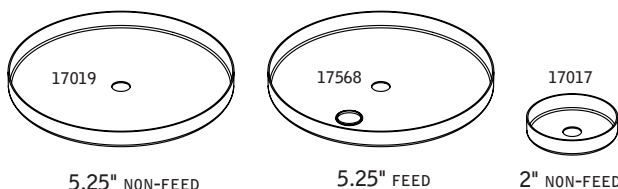


5.25" NON-FEED


5.25" FEED

2" NON-FEED

## STANDARD SUSPENSION













## SLOPED CEILING SUSPENSION



Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).  
To prevent electrical shock, disconnect electrical supply before installation or servicing.

## 5.25" CANOPY & SPLICE BOX ON TEE (USE WHEN SUSPENDING FROM T-BAR)











⚠ NON-FEED LOCATIONS FOLLOW STEPS 1-5 & 7-8

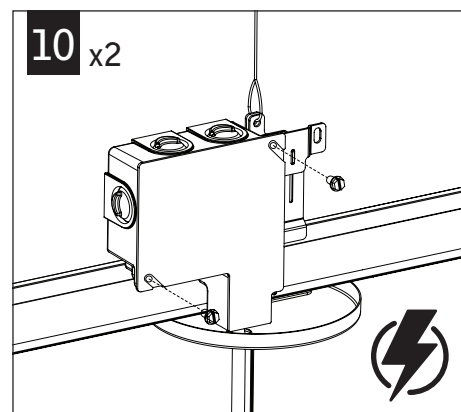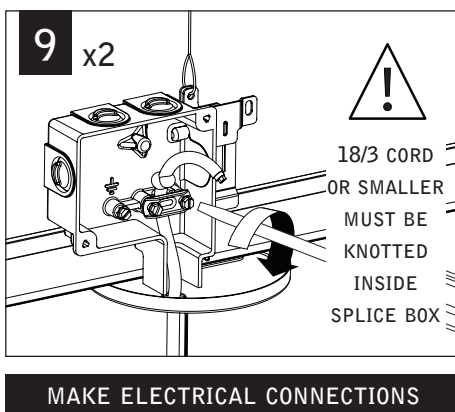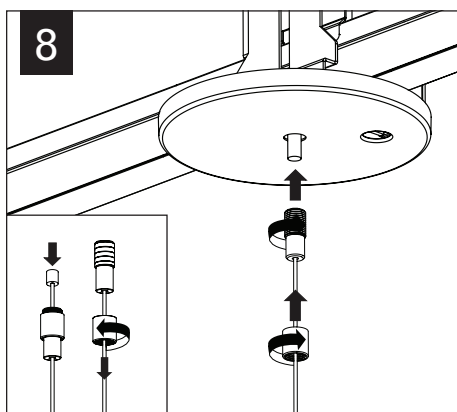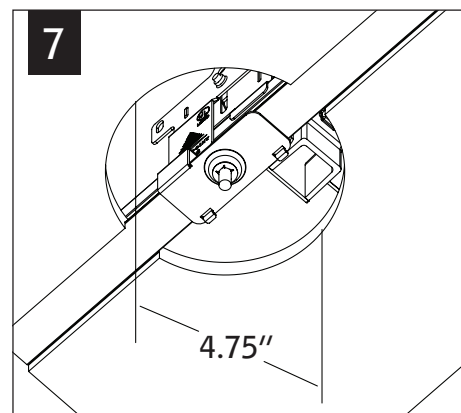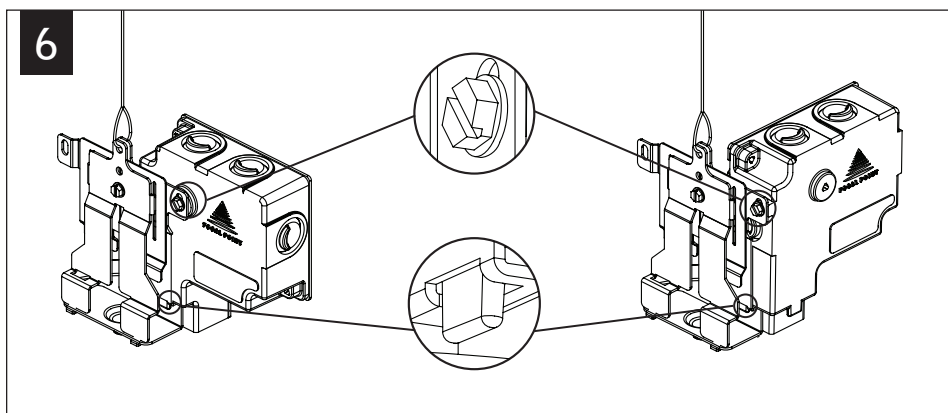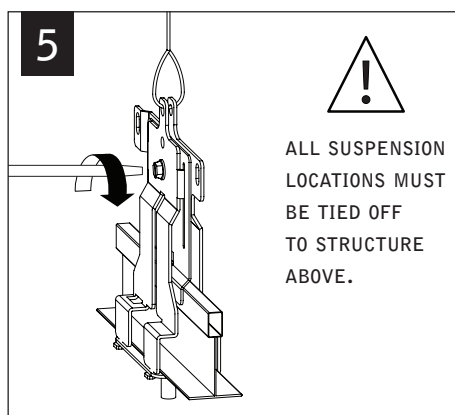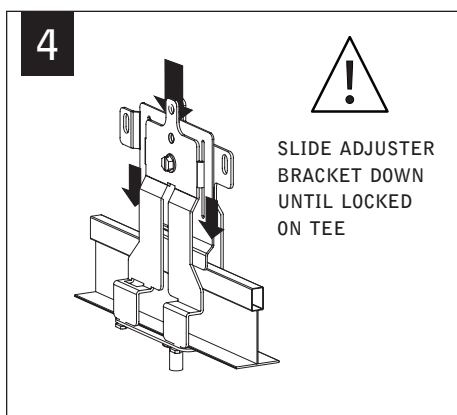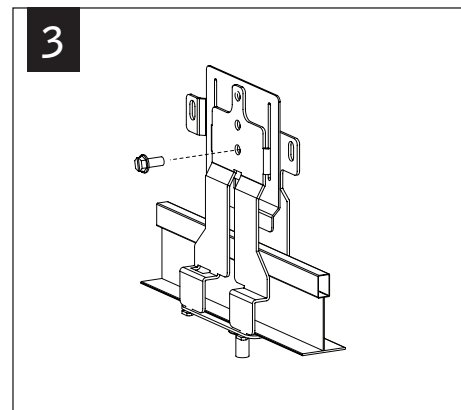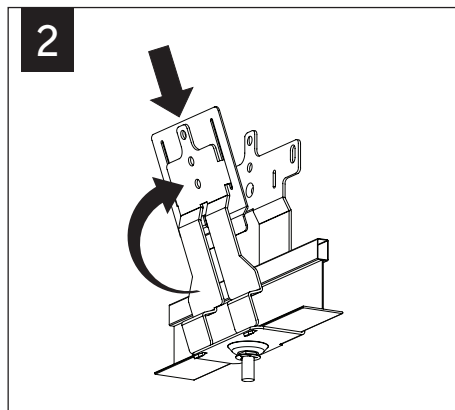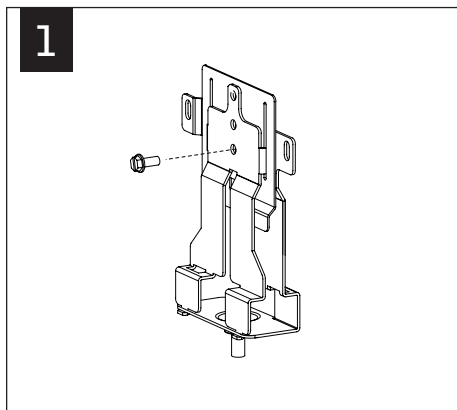

Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).  
To prevent electrical shock, disconnect electrical supply before installation or servicing.

## 5.25" CANOPY & SPLICE BOX OFF TEE (USE WHEN SUSPENDING FROM BAR HANGER)

 NON-FEED LOCATIONS FOLLOW STEPS 1-6 & 8

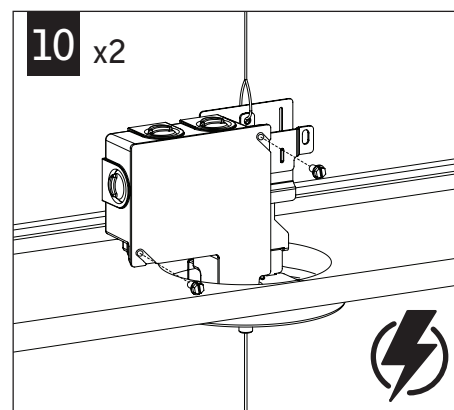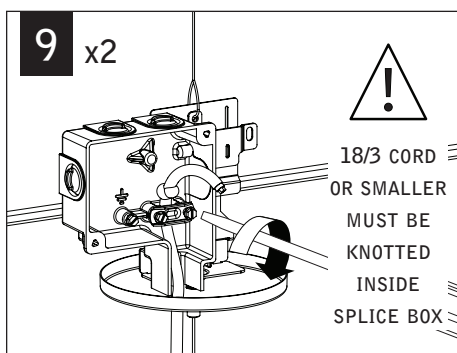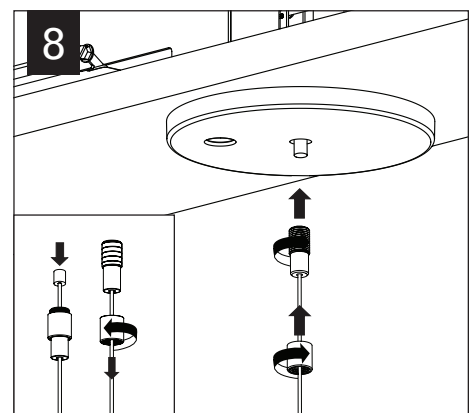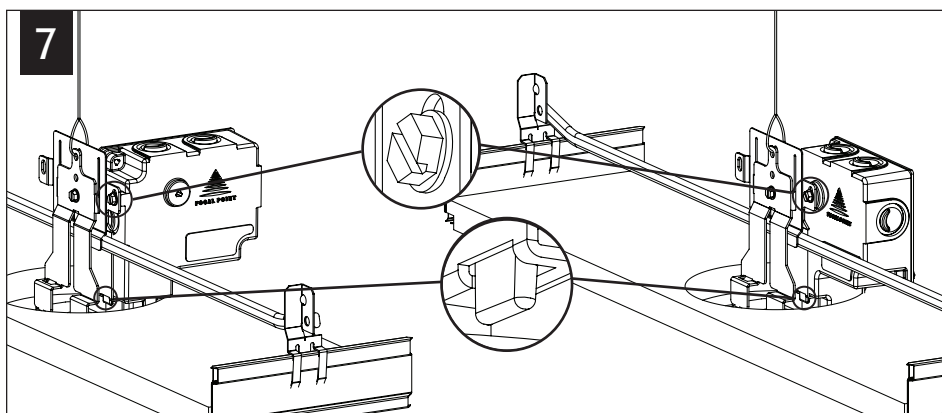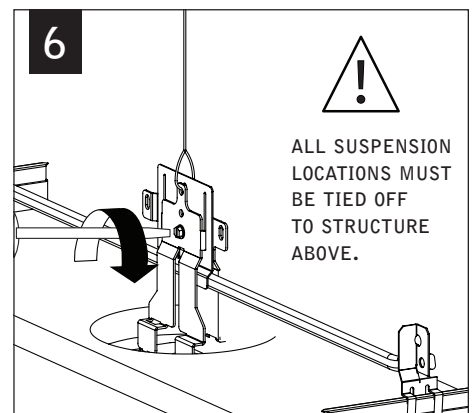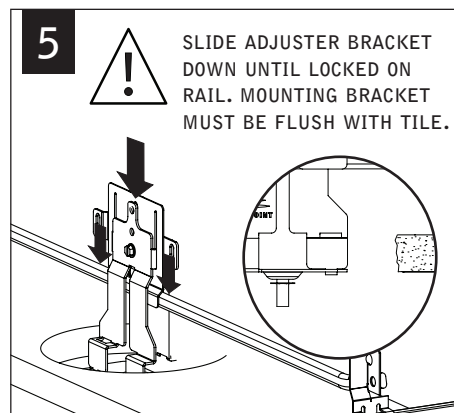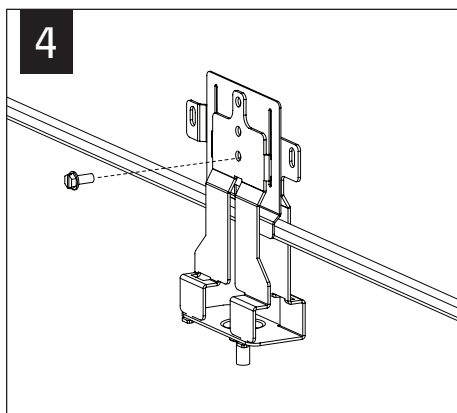
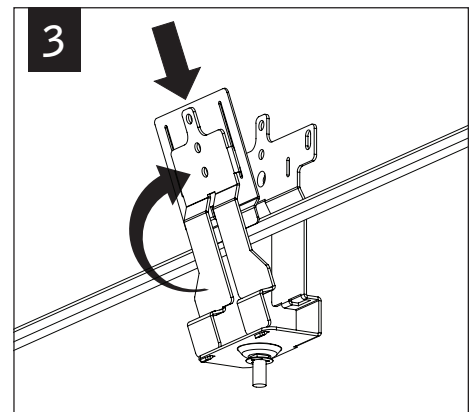
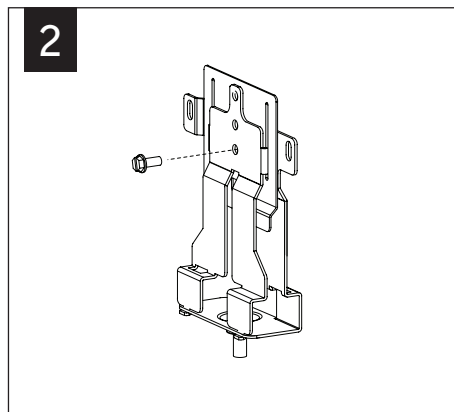
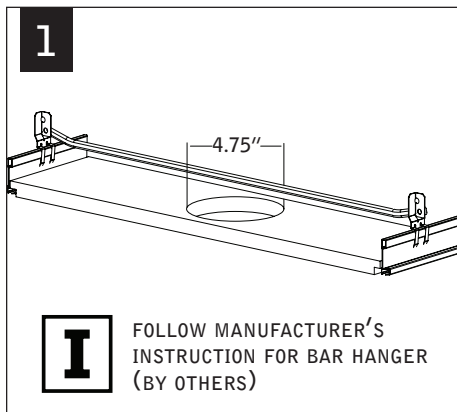


MAKE ELECTRICAL CONNECTIONS





Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).  
To prevent electrical shock, disconnect electrical supply before installation or servicing.

## 5.25" CANOPY & OCTAGONAL JUNCTION BOX (USE WHEN SUSPENDING DIRECTLY FROM JUNCTION BOX)

⚠️ NON-FEED LOCATIONS FOLLOW STEPS 1, 3 & 4. FOR SLOPED CEILINGS WITHOUT CANOPY SEE BOTTOM OF PAGE.

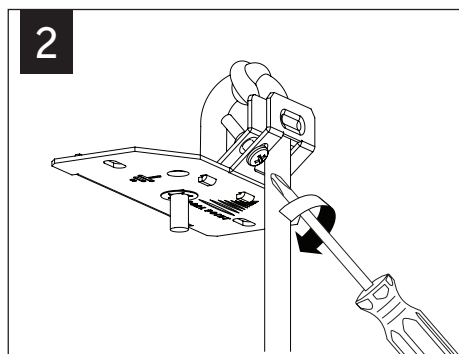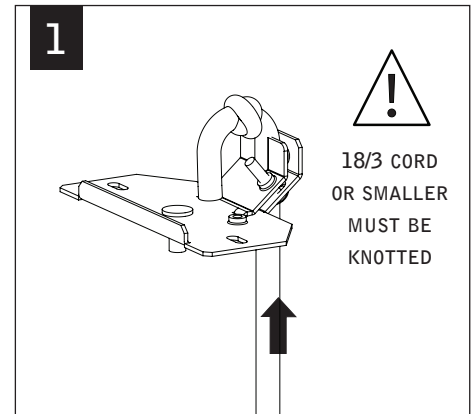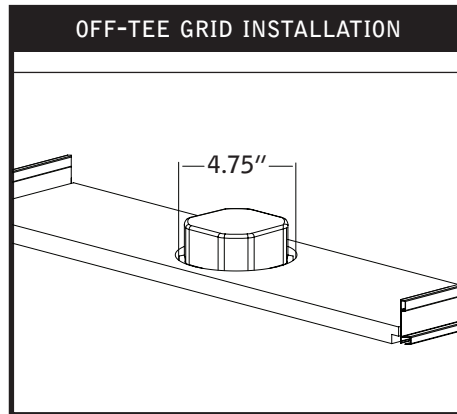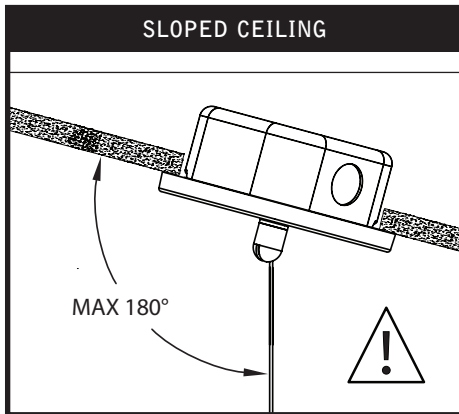

MAKE ELECTRICAL CONNECTIONS

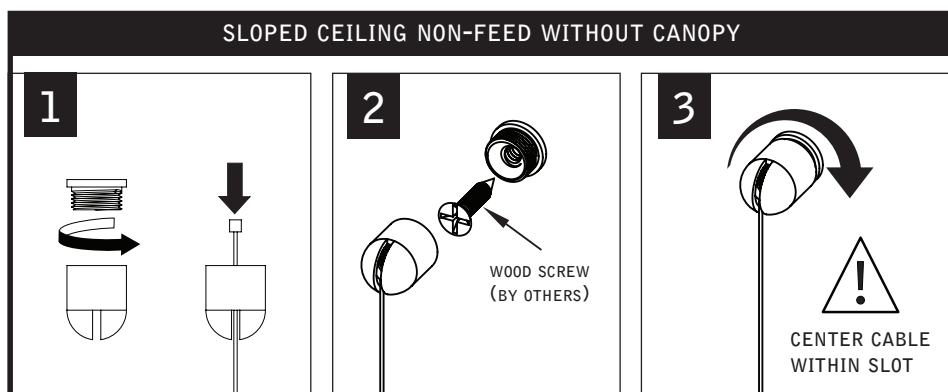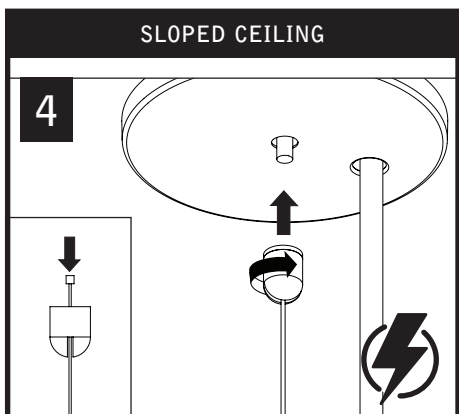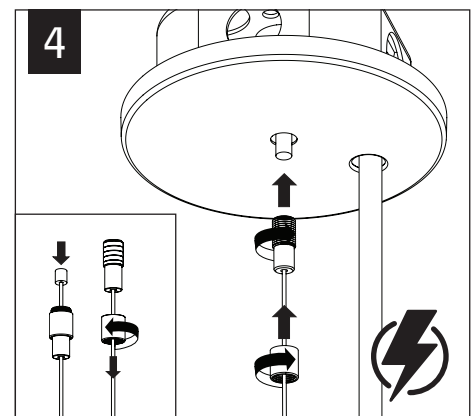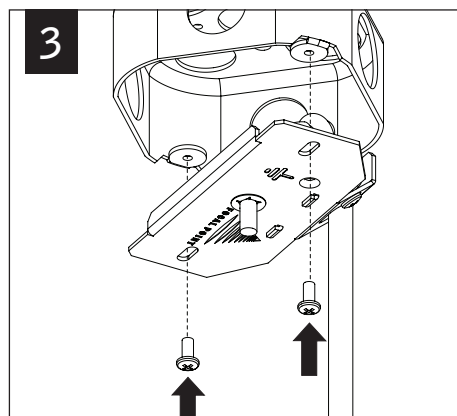

Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).  
To prevent electrical shock, disconnect electrical supply before installation or servicing.


## 2" CANOPY ON TEE (USE WHEN SUSPENDING FROM T-BAR)

1


FOLLOW STEPS 1-5  
ON PAGE 2

UTILIZING 2" CANOPY  
ASSEMBLY PARTS

2

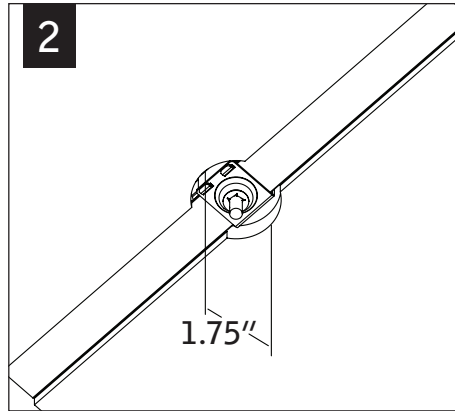


3

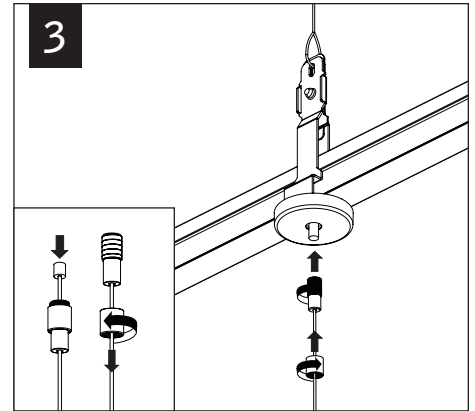

## 2" CANOPY OFF TEE (USE WHEN SUSPENDING FROM BAR HANGER)

1

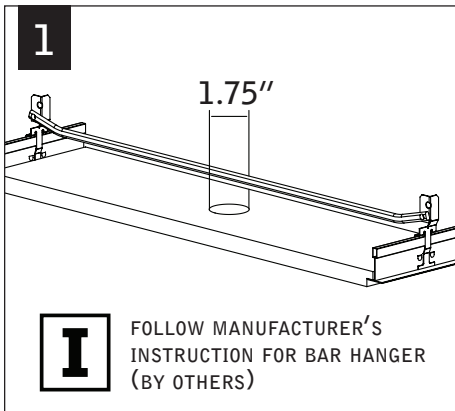

2

FOLLOW STEPS 2-6  
ON PAGE 3

UTILIZING 2" CANOPY  
ASSEMBLY PARTS

3

